




Corella Shield
Rev A

I00~RX
I01~TX
I02
I03
I04
I05
I06
I07
I08
I09
I010
I011
I012
I013
GND
AREF
SDA
SCL



3V3
D_OUT
D_IN
RESETn

GND
GPIO_0
GPIO_1
GPIO_2
GND

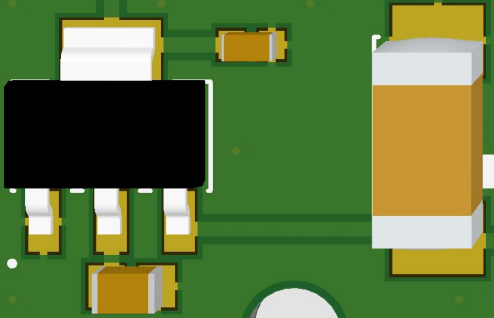

N/C
IOREF
RESET
3V3
5V
GND
GND
Vin

AD0
AD1
AD2
AD3
AD4
AD5

